



www.fistsecurity.com

Setting the System Date and Time

To set the system date and time, enter [#] [#] [*] [6] followed by the Master Code.

Press [1]. The keypad will now accept 10 consecutive digits:

- Enter the Time in Hours and Minutes using the 24 Hour format (00:00 to 23:59).
- Enter the Date in the format MM DD YY

Press

[#] [#] [*] [6] Master Code [1] HH:MM MM DD YY [#] [#]